

NOVA LUCE

9081102, 9081103




1

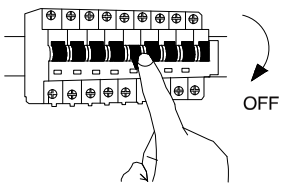


Turn off the general switch

2

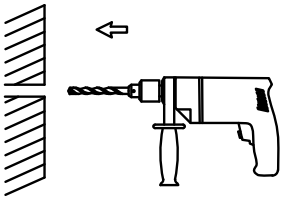


Make a 0.6 cm CutOut

3

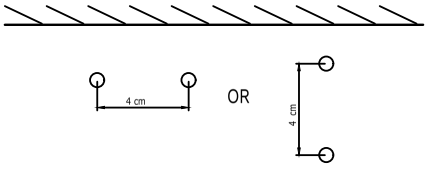


Make holes into desirable positions

4

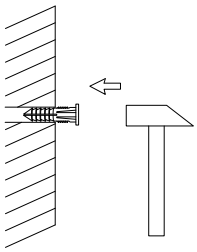


Apply plastic anchors

5

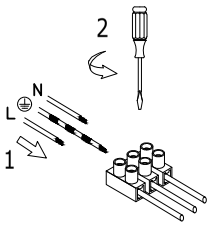


Connect the wires

6

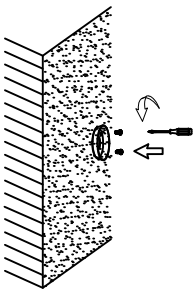


Tie up screws into place

7

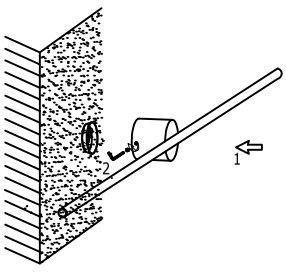

Fix product into place
by applying side screws

8

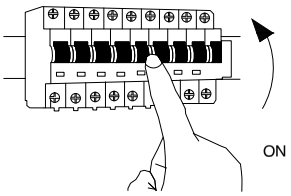

Turn on the general switch

