
NOVA LUCE


9009132

1

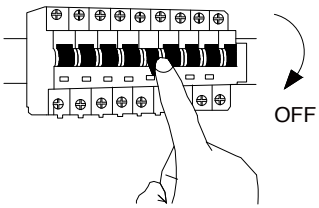


Turn off the general switch

2

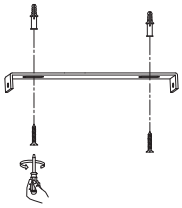


Drill holes & apply plastic anchors
With screws

3

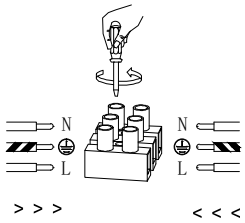


Connect the wires

4

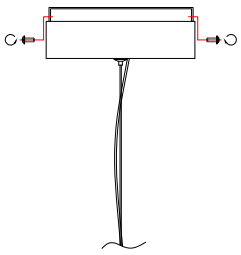


Apply the side screws

5

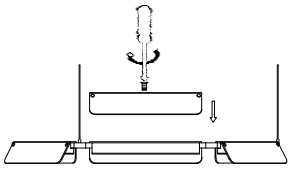


Put the glass into place & apply
The screw

6

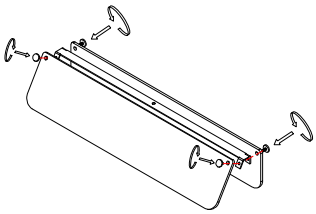


By rotating apply the
Remaining piece

7

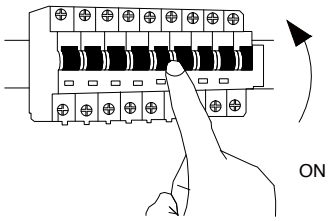

Turn on the general switch

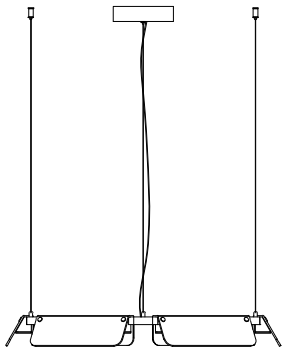

www.novaluce.com