
NOVA LUCE


9001096

1

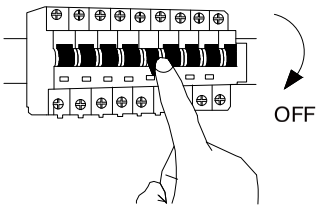


Turn off the general switch

2

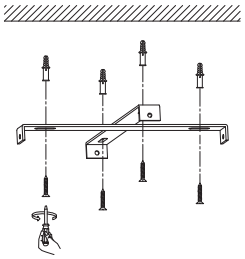


Mark, drill holes & apply
Plastic anchors with screws

3

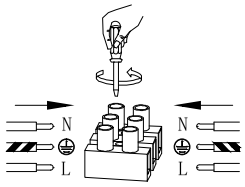


Connect the wires

4

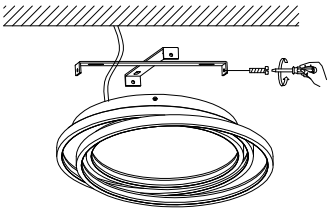


Apply the Side screws

5

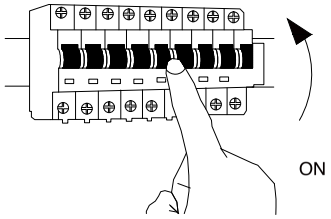

Turn on the general switch

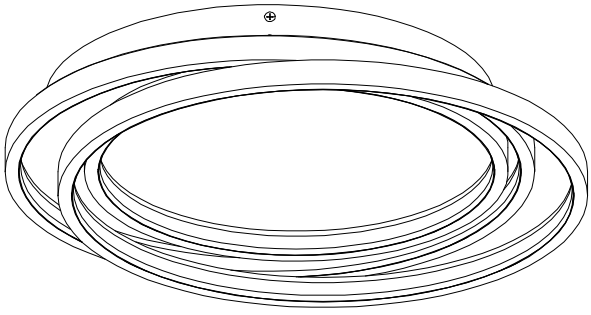

www.novaluce.com