
NOVA LUCE

9333060


4 4

1

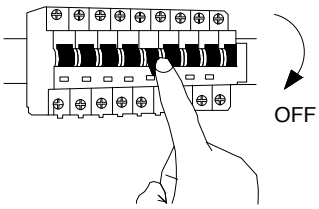


Turn off the general switch

2

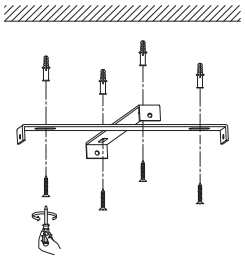


Drill holes & apply plastic anchors
With screws

3

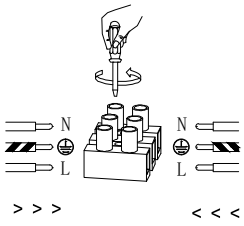


Connect the wires

4

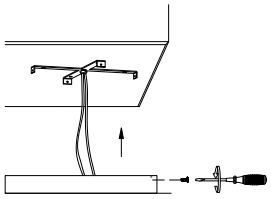


Apply the side screws

5

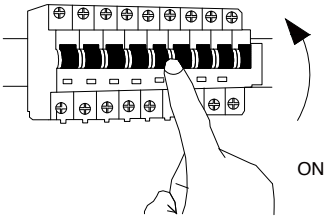

Turn on the general switch

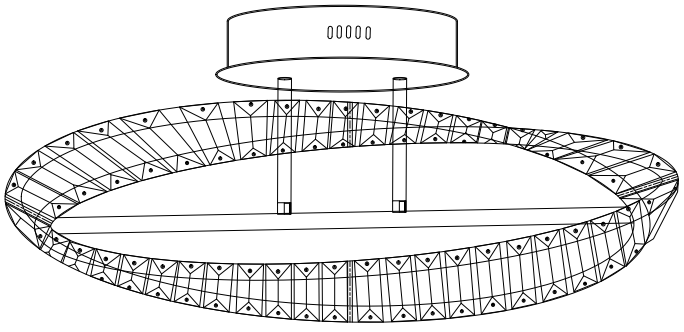

www.novaluce.com