
NOVA LUCE


9333070

1

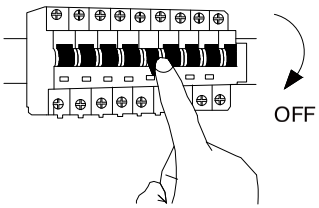


Turn off the general switch

2

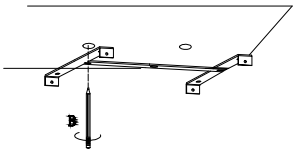


Mark where to drill

3

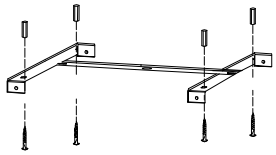


Apply plastic anchors with screws

4

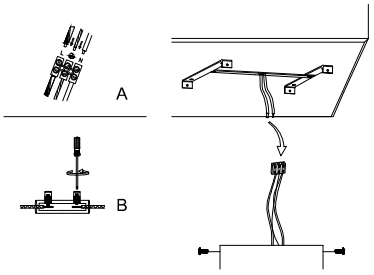


Connect the wires

5

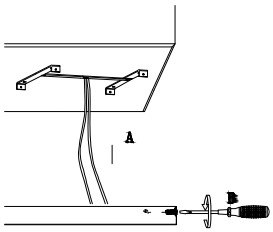


Apply the side screws

6

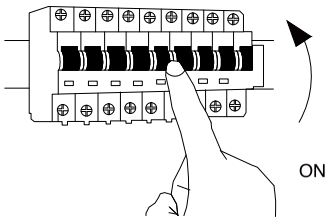

Turn on the general switch

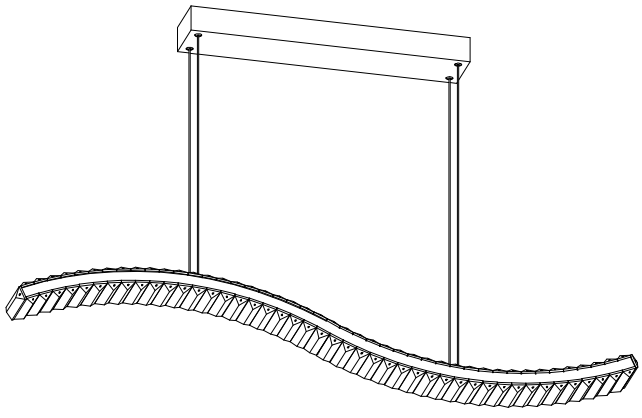

www.novaluce.com