
NOVA LUCE


9006054

1

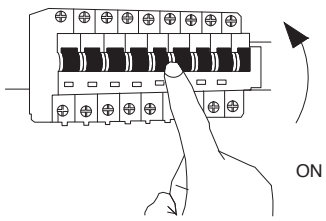


Turn off the general switch

2

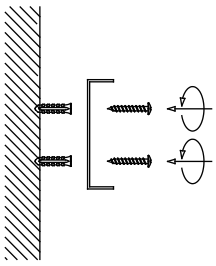


Align, mark and drill holes
to tie up the screws

3

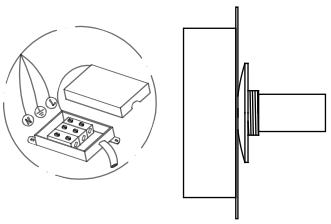


Connect the wires

4

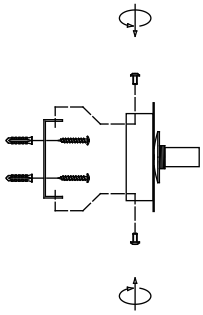


Apply the side screws

5

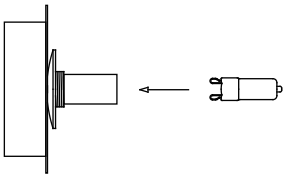


Insert the bulb

6

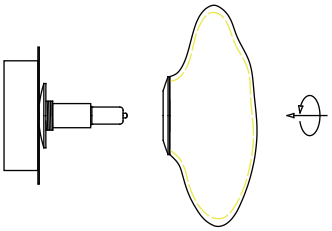

Apply the glass by rotating

7

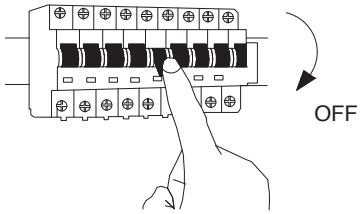

Turn on the general switch

8

