
NOVA LUCE


9009116

1

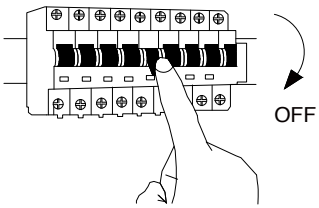



Turn off the general switch

2

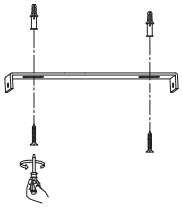


Drill holes & apply plastic anchors
With screws

3

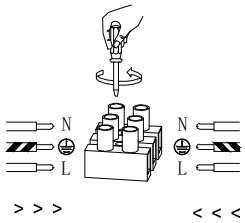



Connect the wires

4

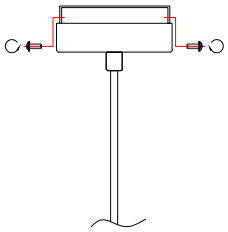


Apply the side screws

5

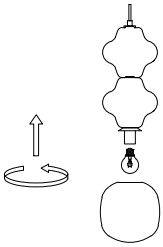


By rotating
Apply the glass into place

6

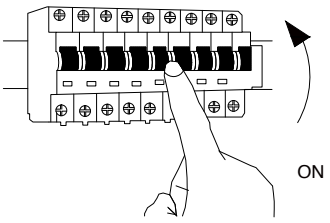


Turn on the general switch



www.novaluce.com