
NOVA LUCE

9019720


4 4

1

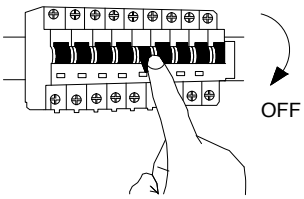


Turn off the general switch

2

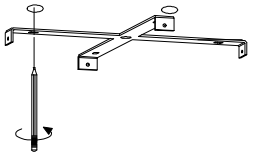


Mark the areas

3

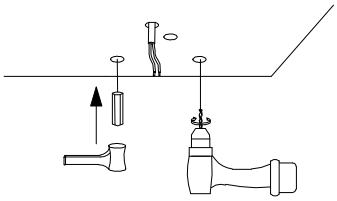


Drill holes on the marked areas

4

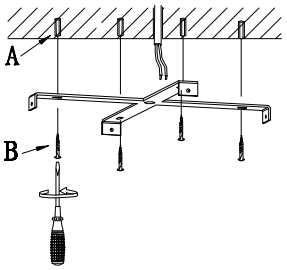


Apply plastic anchors & screws

5

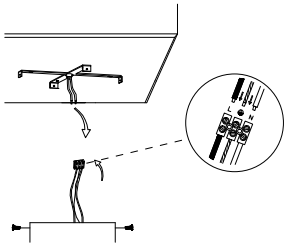


Connect the wires

6

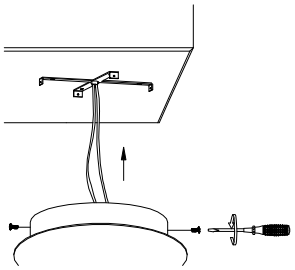


Put the canopy in place
& Apply the side screws

7

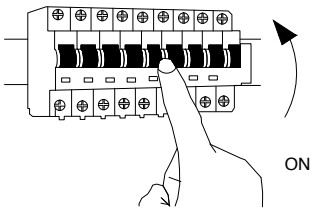

Turn on the general switch

8

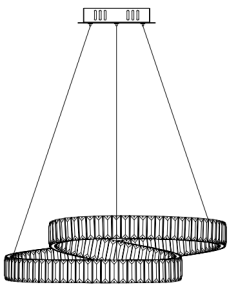

www.novaluce.com