

NOVA LUCE

9019721

4 / 4

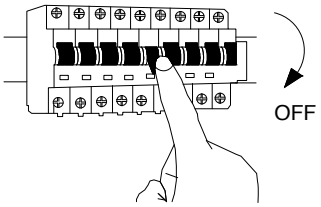



1. Turn off the general switch

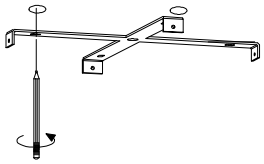


2. Mark the areas

---

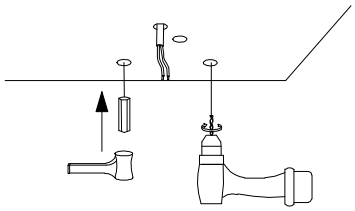


3. Drill holes on the marked areas

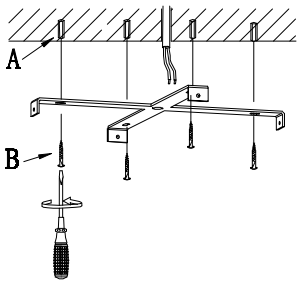



4. Apply plastic anchors & screws

---

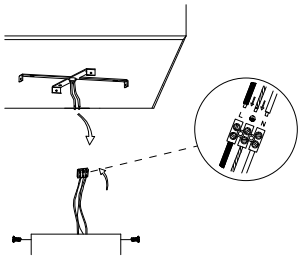


5. Connect the wires

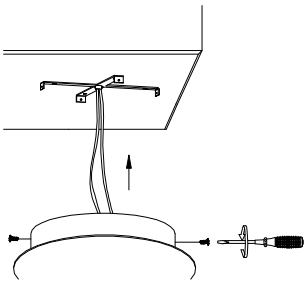

6. Put the canopy in place
& Apply the side screws

---

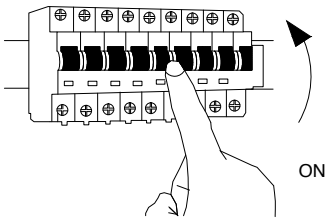


7. Turn on the general switch

