


NOVA LUCE

9858713

x2 x2

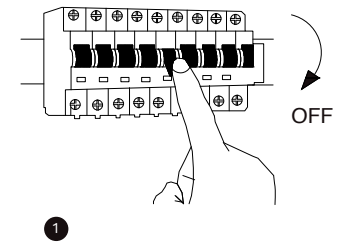

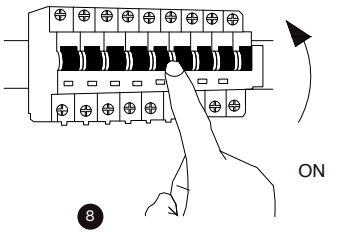

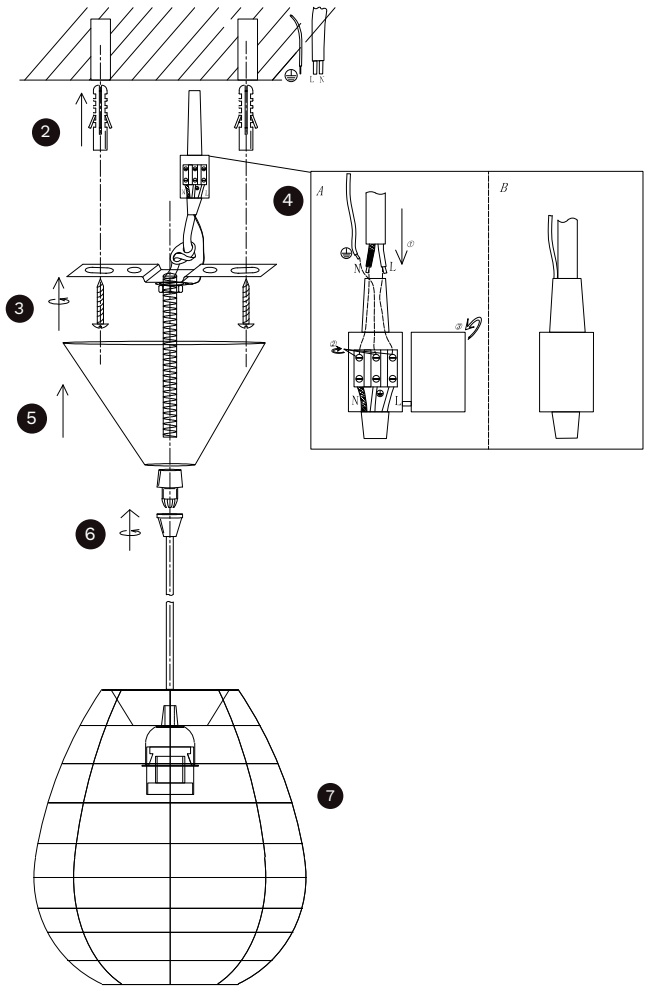

1. Turn off general switch
2. 3. Align, Drill Holes & Make It Stable
4. Connect The Wires
5. Put It In Place & Apply side Screws
6. Apply the nut screw
7. Apply the bulb
8. Turn on general switch