
NOVA LUCE


9248172

1

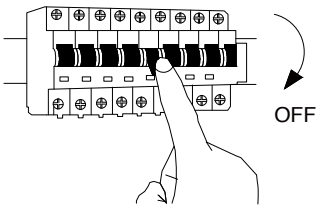


Turn off the general switch

2

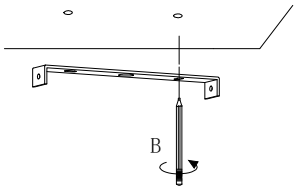


Mark where to drill

3

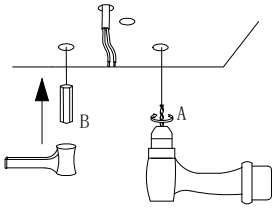


Drill holes & apply
Plastic anchors

4

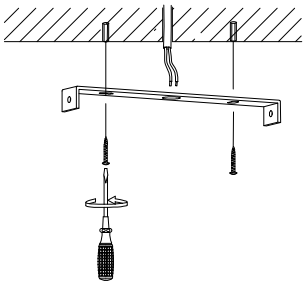


Apply screws

5

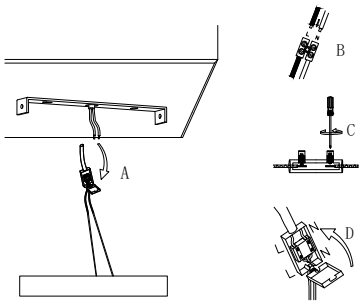


Connect the wires

6

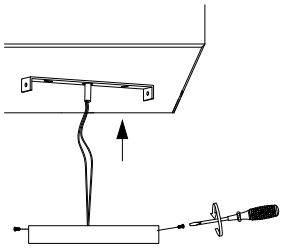


Apply the side screws

7

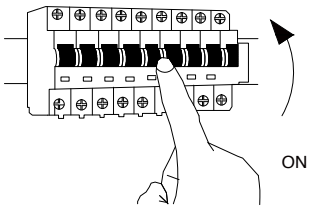

Tun on the general switch

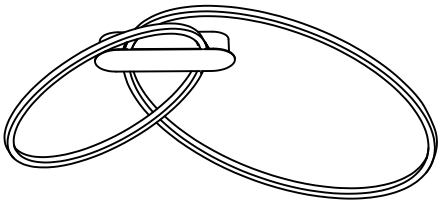

www.novaluce.com