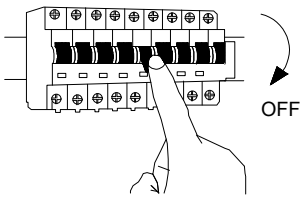
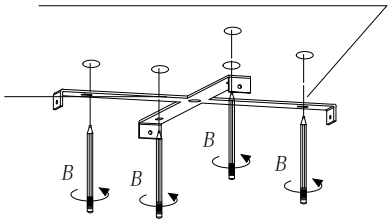
NOVA LUCE

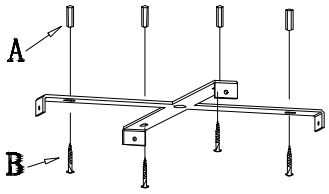
9019741



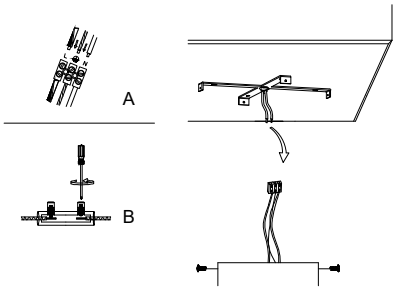

1. Turn off the general switch



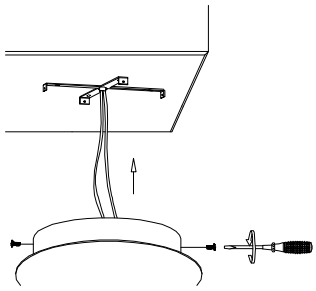

2. Mark & drill holes



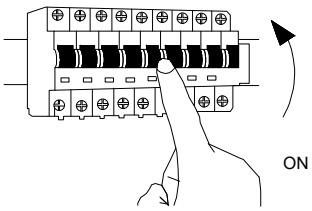

3. Apply plastic anchors with screws




4. Connect the wires



5. Apply the side screws




6. Turn on the general switch

