



NOVA LUCE

9624064
9624096

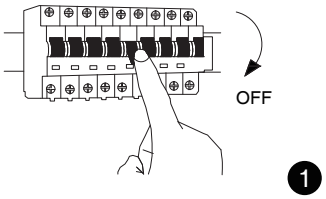

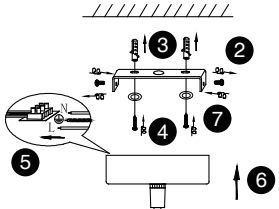

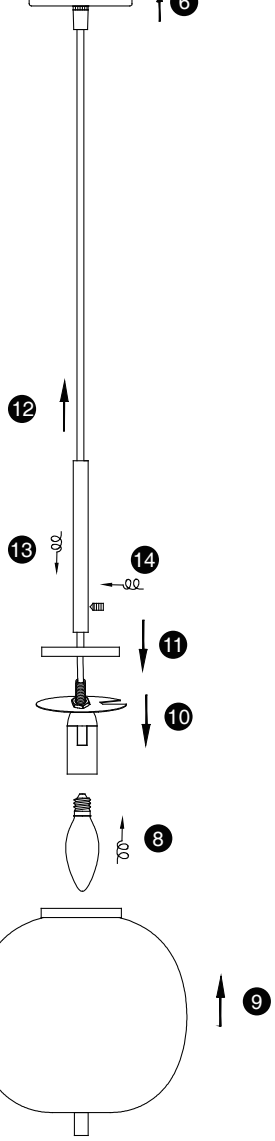

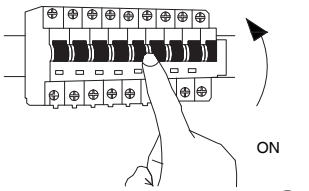

1. Turn off the general switch
2. Drill & make holes
3. Apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place
7. Apply side screws
8. By rotating put the bulb in place
9. Apply carefully the acrylic
10. 11. Put the socket in place
12. 13. By rotating place the pendant
14. Apply the side pendant screw
15. Turn on general switch