
NOVA LUCE


9960271

1

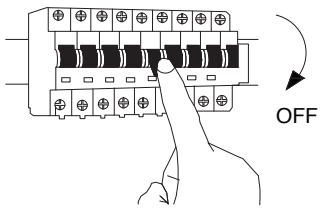


Turn off the general switch

2

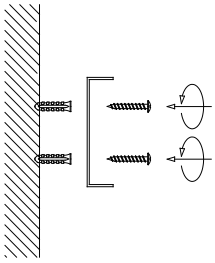


Align, mark and drill holes
to apply the screws

3

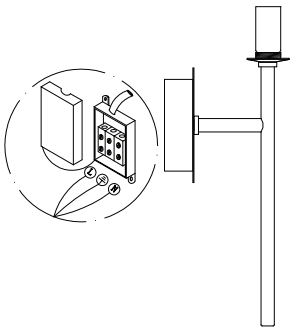


Connect the wires

4

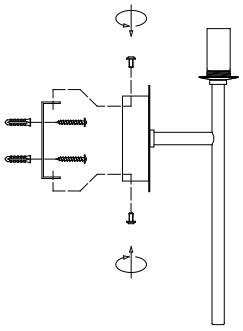


Apply the side screws

5




Insert the bulb

6

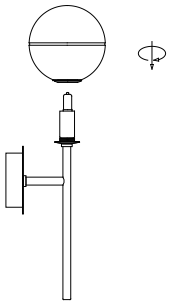


By rotating apply the glass

7

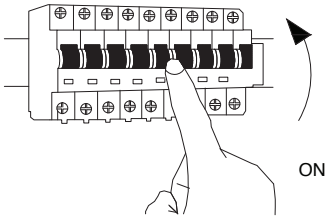

Turn on the general switch

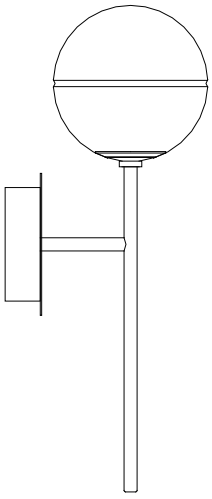

www.novaluce.com