

NOVA LUCE


9345635, 9345636, 9345637

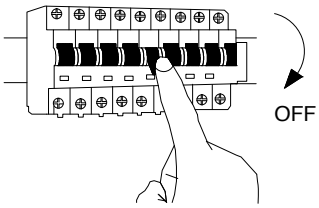



1. Turn off the general switch

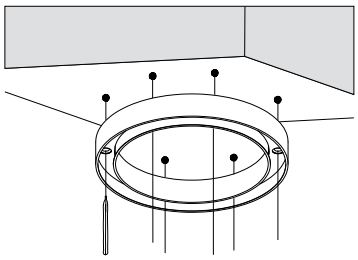


2. Mark where to drill holes

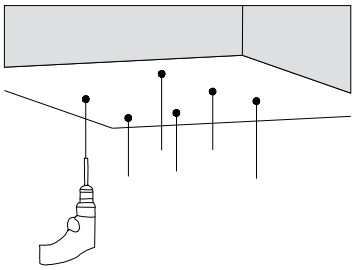


3. Drill on the marked areas

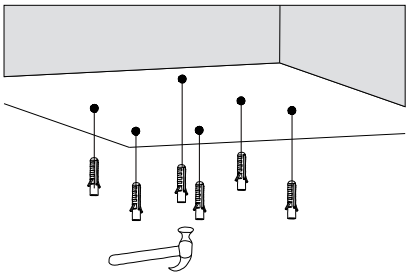


4. Apply plastic anchors

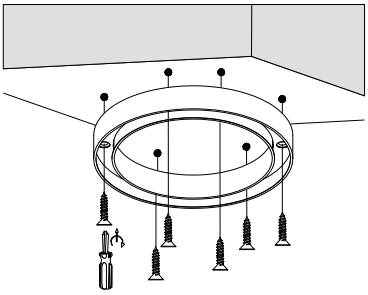


5. Apply screws

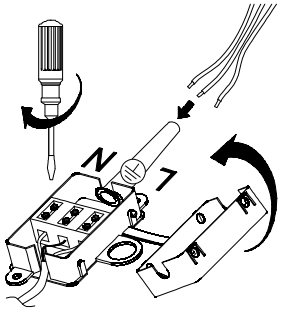



6. Connect the wires

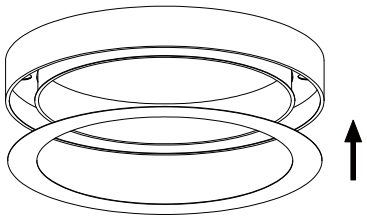


7. Put the product in place

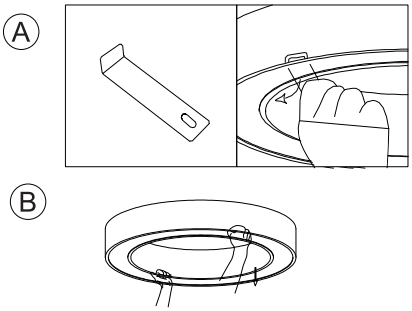


8. With the extra tool edjust product

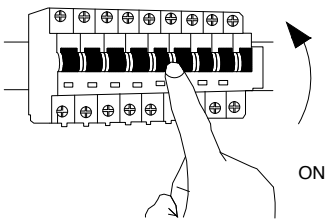


9. Turn on the general switch

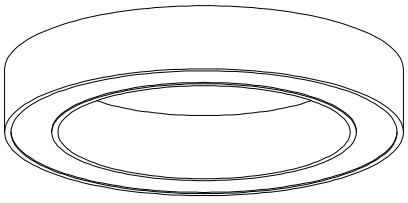

www.novaluce.com