
NOVA LUCE


9060214

1

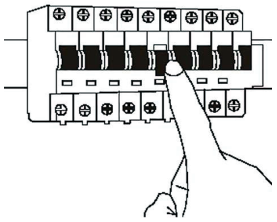


Turn off the general switch

2

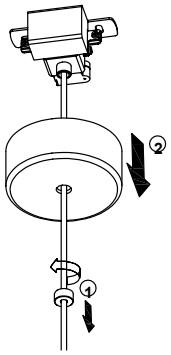


Break it apart

3

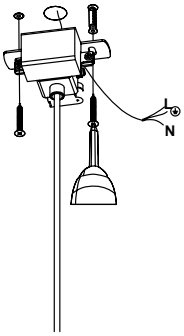


Align, mark and drill holes
to apply the screws

4

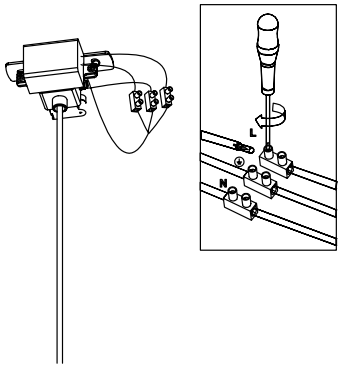


Connect the 3 wires

5

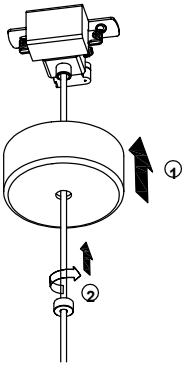


Fix the canopy on the ceiling

6

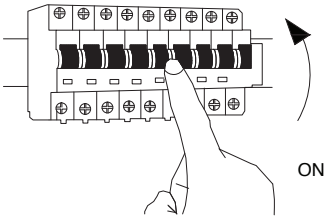

Turn on the general switch



www.novaluce.com