
NOVA LUCE


9060215

1

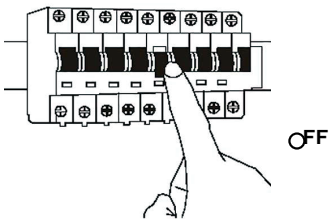



Turn off the general switch

2

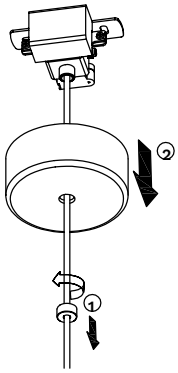


Break it apart

3

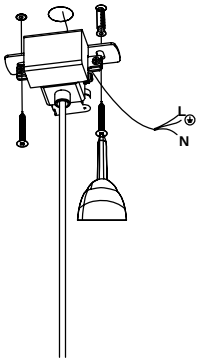



Align, mark and drill holes to apply the screws

4

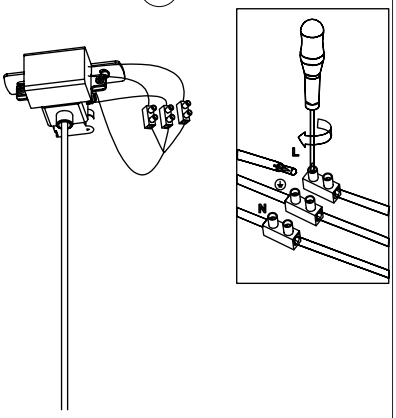



Connect the 3 wires

5

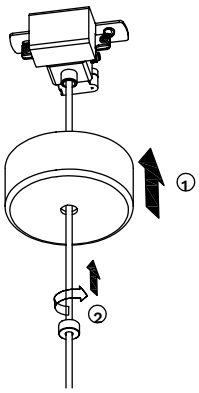


Fix the canopy on the ceiling

6

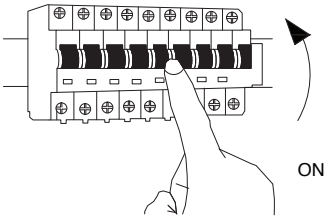


Turn on the general switch



www.novaluce.com