
NOVA LUCE


9060218

1

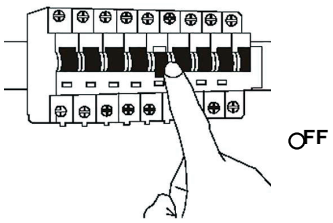



Turn off the general switch

2

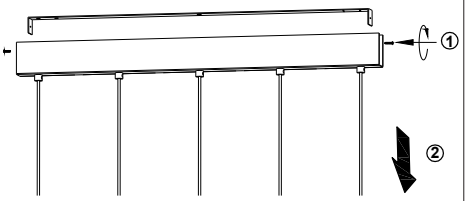



Break it apart

3

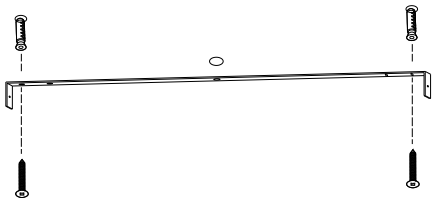


Align, mark and drill holes to apply the screws

4

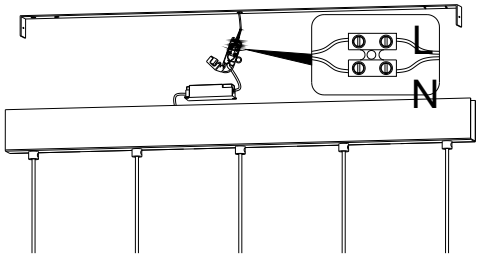



Connect the 2 wires

5

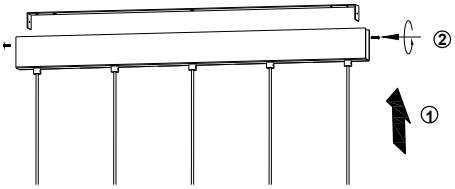



Fix the canopy on the ceiling

6

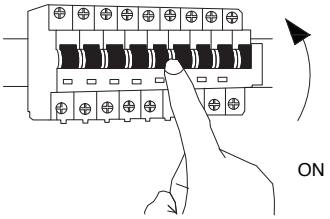


Turn on the general switch

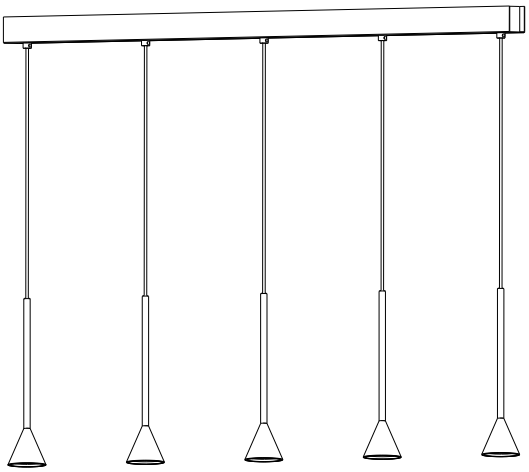

www.novaluce.com