
NOVA LUCE


9009101

1

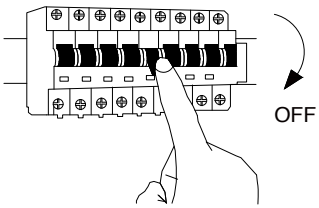


Turn off the general switch

2

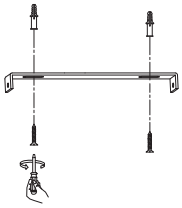


Drill holes & apply plastic anchors
With screws

3

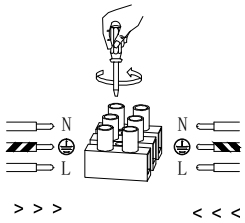


Connect the wires

4

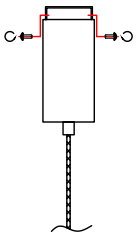


Apply the side screws

5




Place the glass into place
& Apply the screw

6

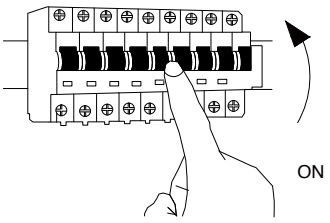

Turn on the general switch

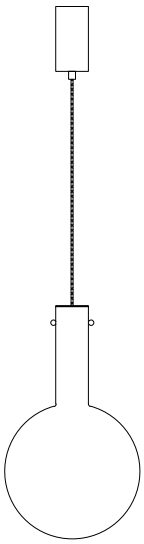

www.novaluce.com