
NOVA LUCE


9028856

1

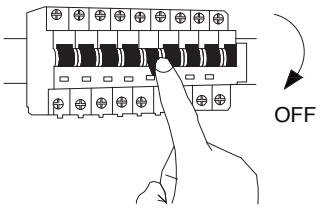


Turn off the general switch

2

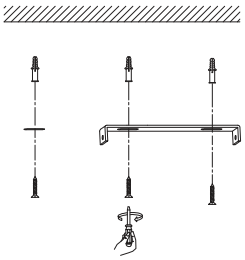


Drill holes & apply plastic anchors
With screws

3

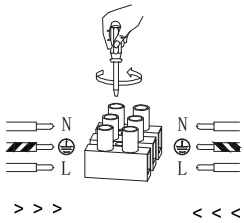


Connect the wires

4

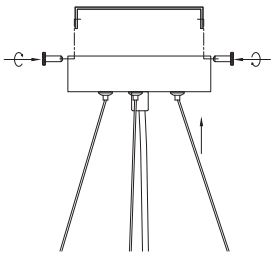


Apply the side screws

5

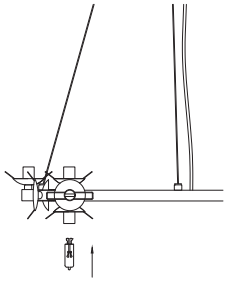


Apply the bulb

6

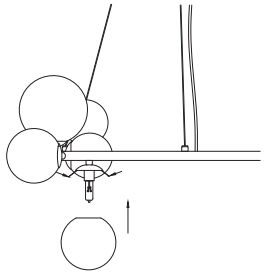


Apply the glass

7

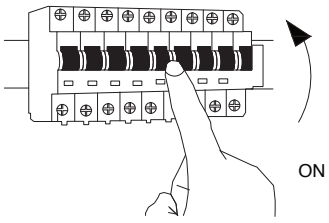

Turn on the general switch

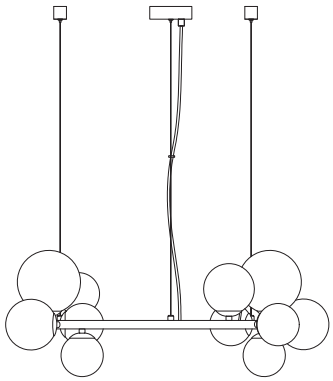

ALSO YOU CAN DO


www.novaluce.com

> > >

NOVA LUCE


9028856

1

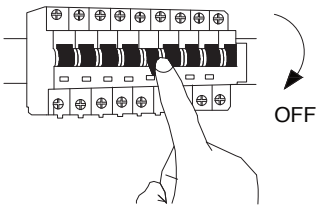


Turn off the general switch

2

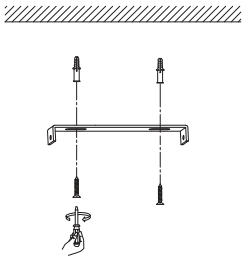


Drill holes & apply plastic anchors
With screws

3

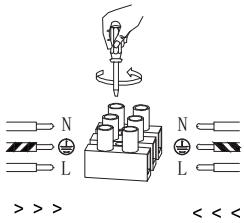


Connect the wires

4

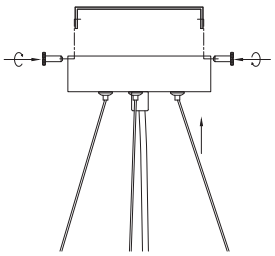


Apply the side screws

5

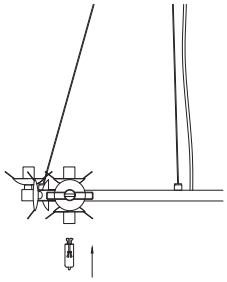


Apply the bulb

6

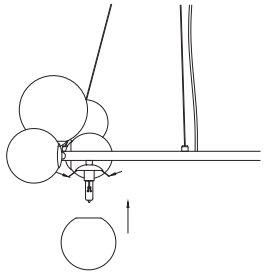


Apply the glass

7

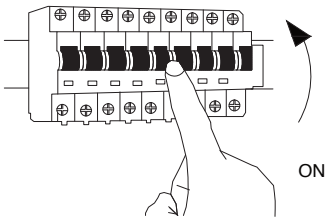

Turn on the general switch

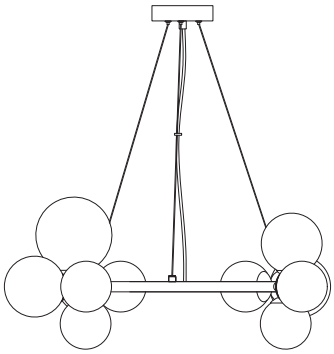

www.novaluce.com