
NOVA LUCE


9919100 9919101

1

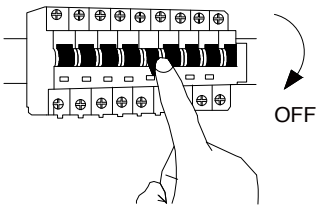


Turn off the general switch

2

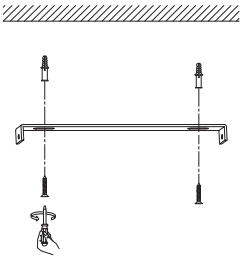


Drill holes & apply plastic anchors
With screws

3

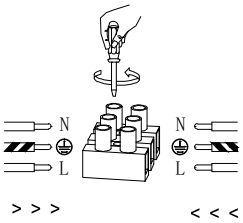

Connect the wires

4

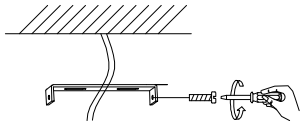


Apply the side screws

5




Apply the bulb

6

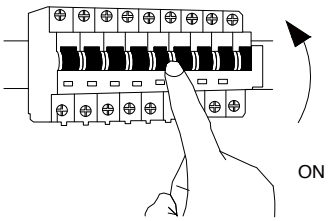

Turn on the general switch

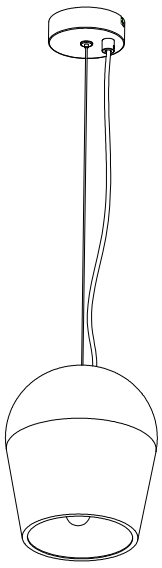

www.novaluce.com