

NOVA LUCE

9695321

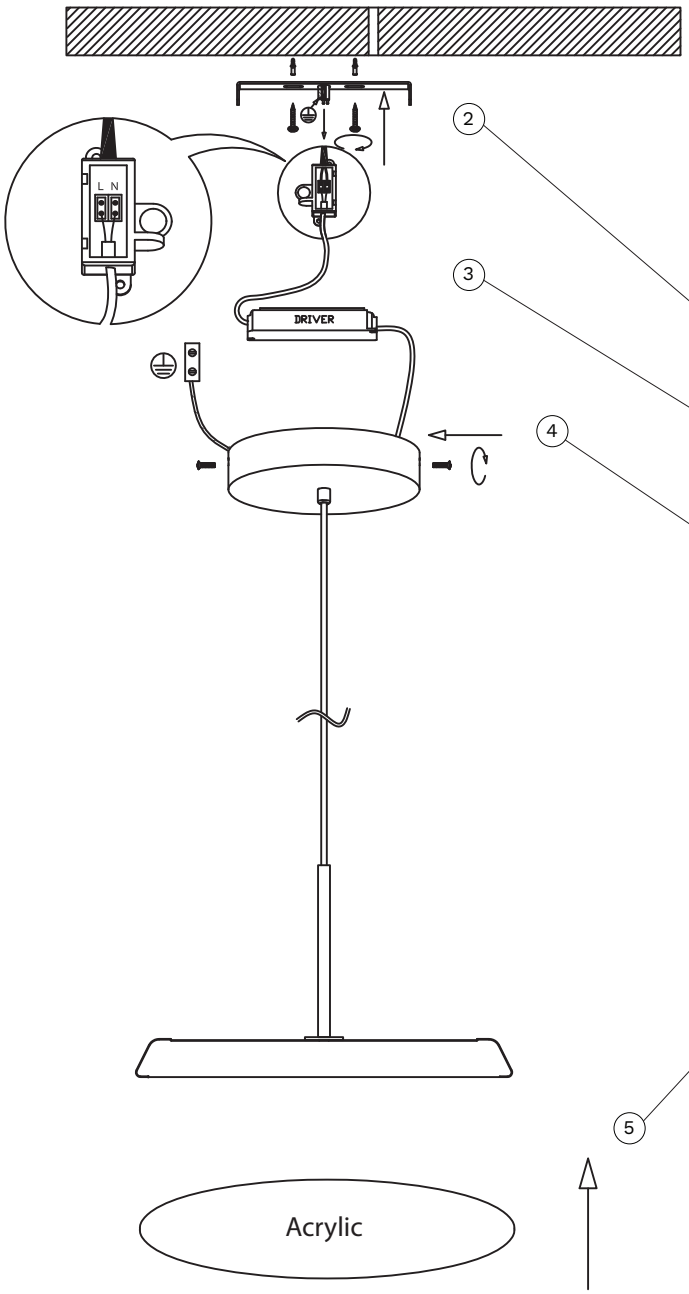

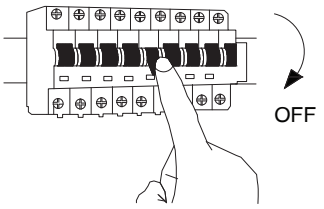


1. Turn off the general switch

2. Allign, mark & drill holes,
apply plastic anchors & tide up screws

3. Connect wires

4. Apply side screws

5. Insert part by pressing it upwards

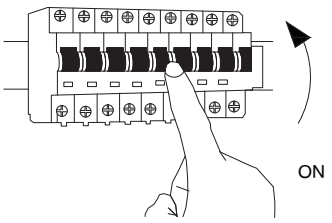

6. Turn on the general switch