
NOVA LUCE


9620161

1

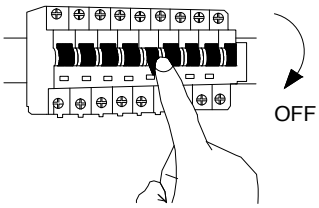


Turn off the general switch

2

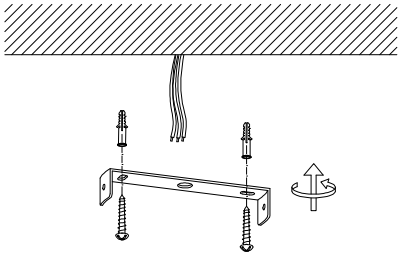


Drill holes
& Apply plastic anchors with screws

3

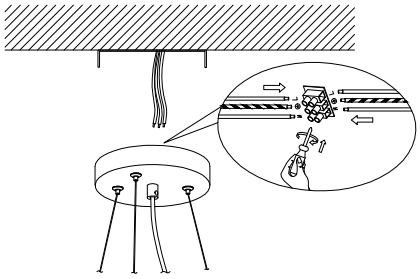


Connect the wires

4

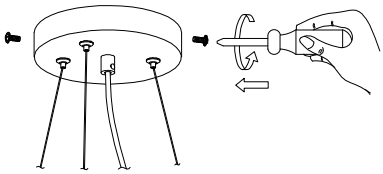


Apply the side screws

5

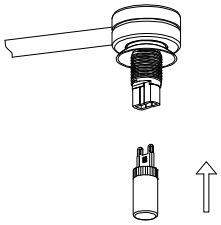


Apply the bulb

6

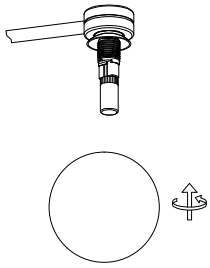


Apply the glasses into place
By rotating

7

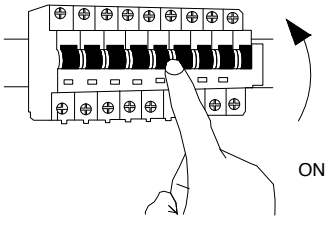

Turn on the general switch

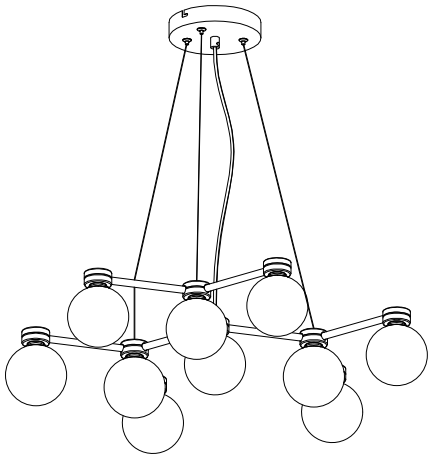

www.novaluce.com