
NOVA LUCE


9009100

1

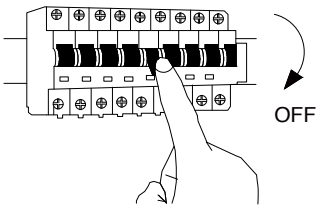


Turn off the general switch

2

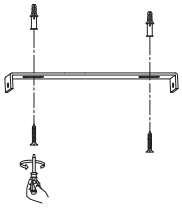


Drill holes & apply plastic anchors
With screws

3

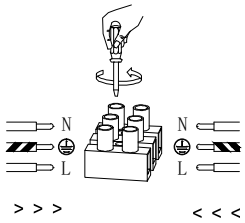


Connect the wires

4

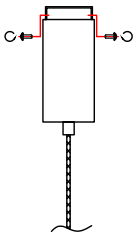


Apply the side screws

5

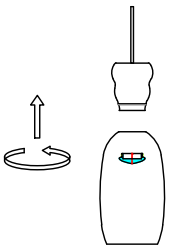


Apply the remaining part
Into place

6

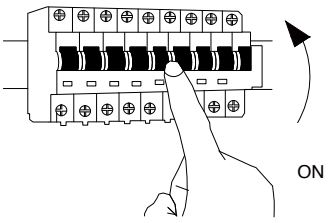

Turn on the general switch



www.novaluce.com