
NOVA LUCE


9009166

1

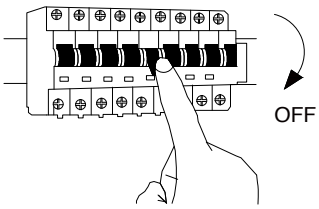


Turn off the general switch

2

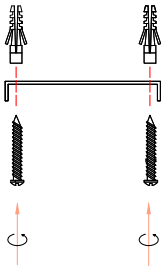


Drill holes & apply plastic anchors
With screws

3

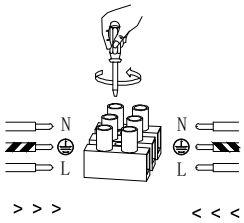


Connect the wires

4

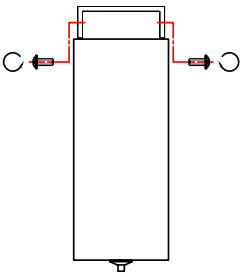


Apply the side screws

5

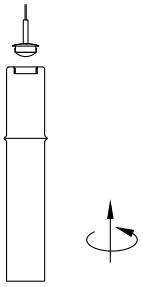


Instal glass shade

6

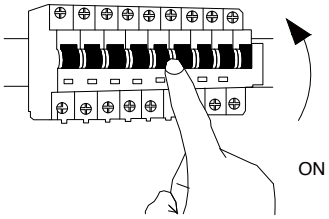

Turn on the general switch



www.novaluce.com