
NOVA LUCE


9236362

1

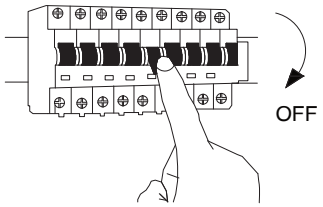



Turn off the general switch

2

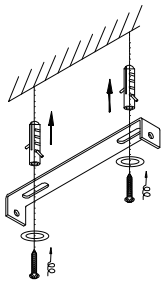


Drill holes & apply plastic anchors
Tie up screws

3

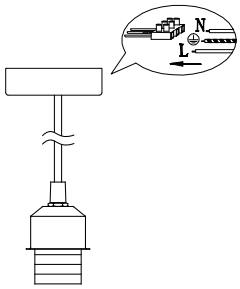



Connect the wires

4

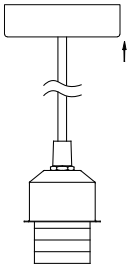


Put the canopy in place

5




Apply side screws

6

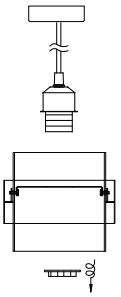


By rotating untight the socket

7

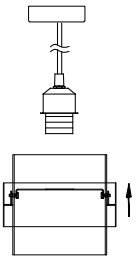


Carefully apply the acrylic

8

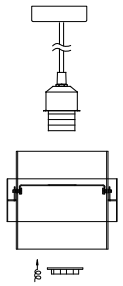


Put the socket in place

9



Apply the bulb by rotate

10

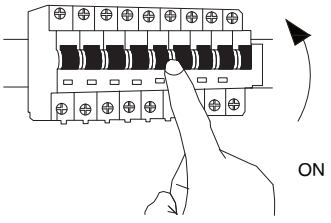


Turn on the general switch

www.novaluce.com