
NOVA LUCE

9236382

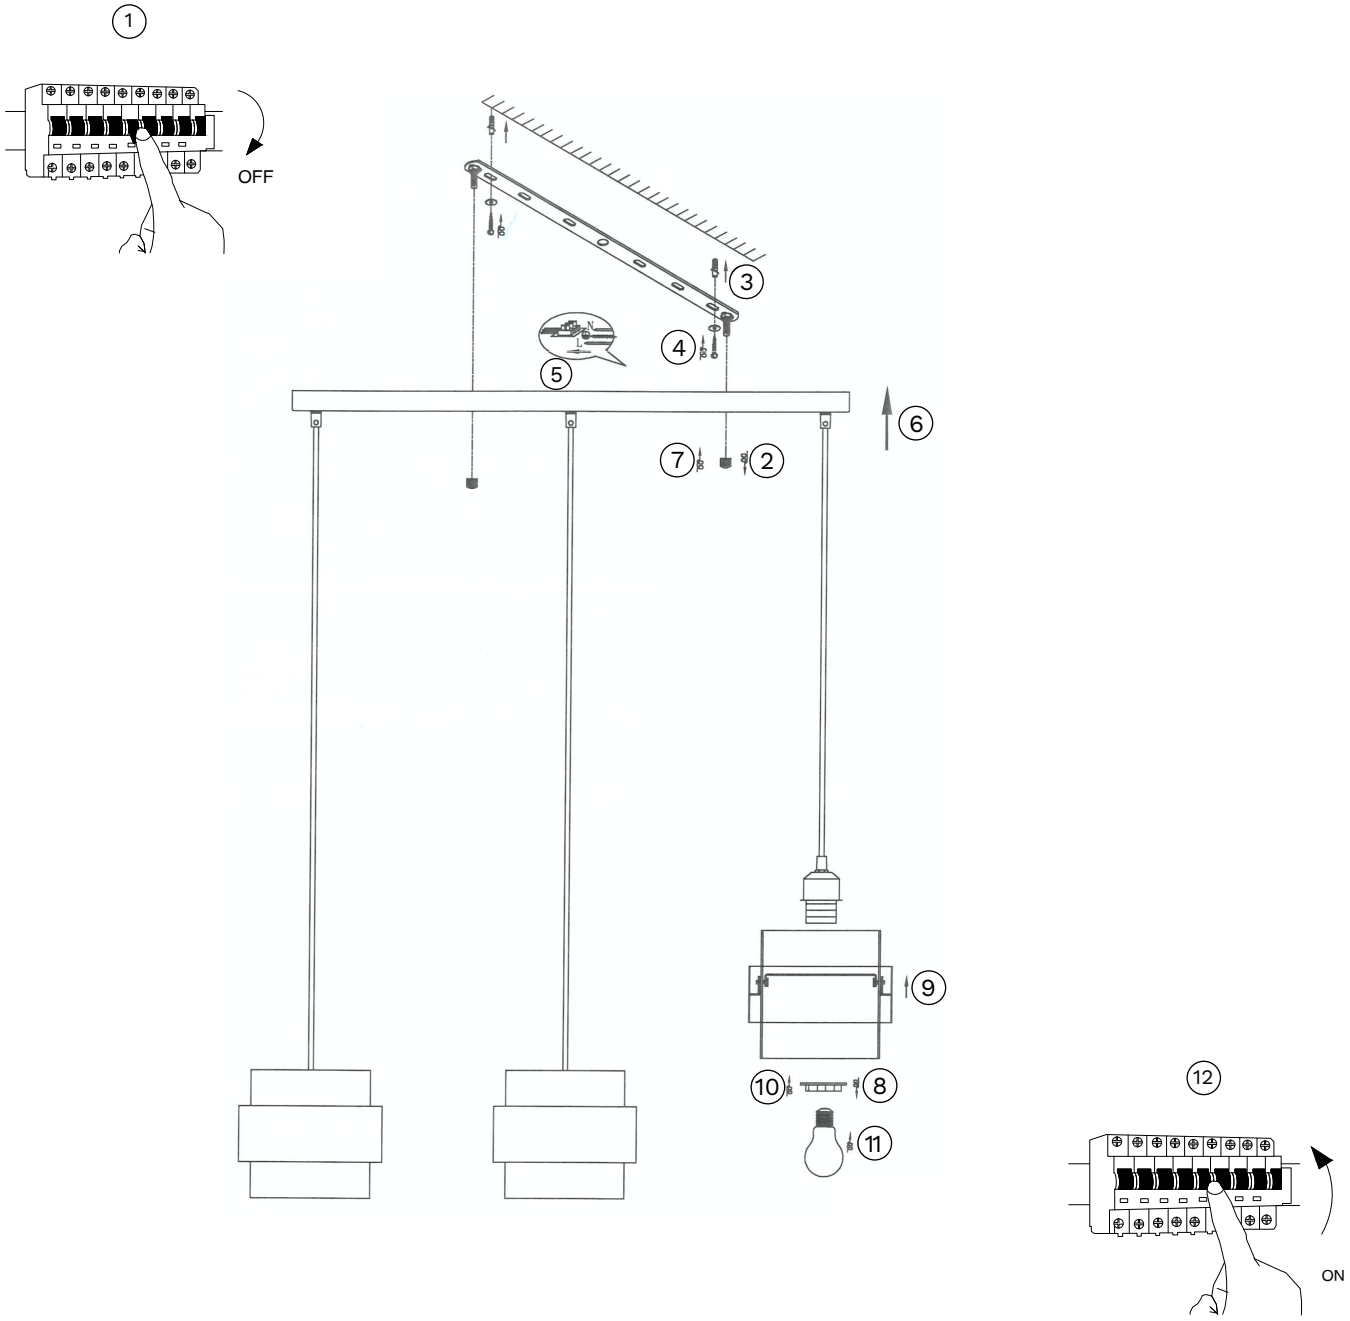

1. Turn off the general switch
2. Untight the cap
3. Drill holes & apply plastic anchors
4. Apply screws
5. Connect wires
6. Put the canopy in place
7. Tight the cap
8. By rotating untight the socket
9. Apply carefully the acrylic
10. Put the socket in place
11. Apply the bulb
12. Turn on general switch