

NOVA LUCE


9030504

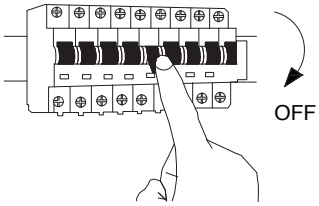


1. Turn off the general switch

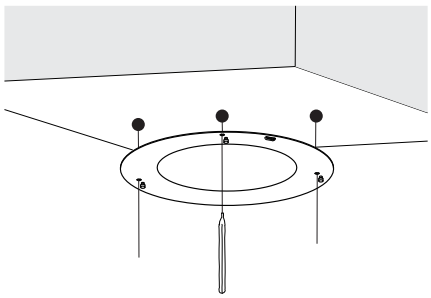


2. Mark the areas

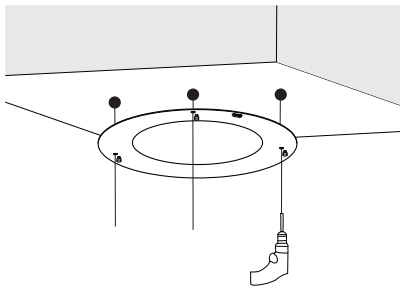


3. Drill on the marked areas

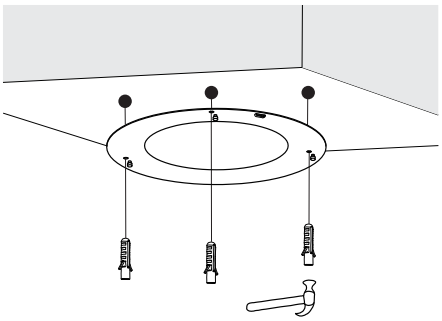


4. Apply plastic anchors

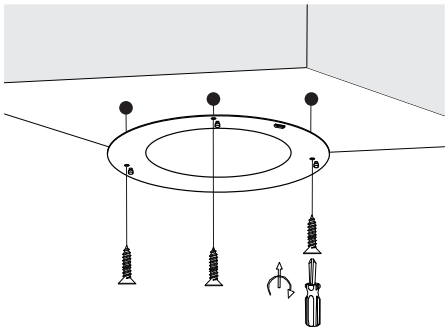


5. Apply screws

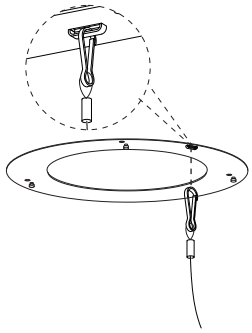


6. Apply the element

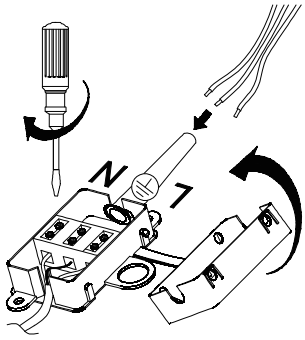

7 Connect the wires

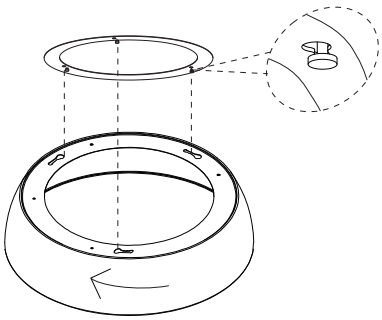

8. Put in place the product

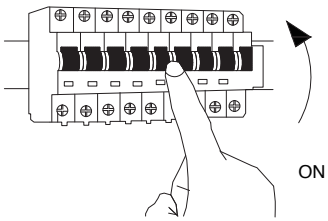

9. Turn on the general switch

