

NOVA LUCE


9345526，9345527
9345528，9345529

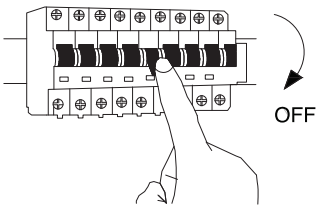


1. Turn off the general switch

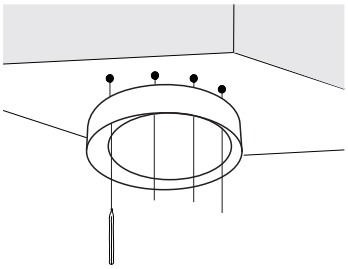


2. Mark where to drill holes

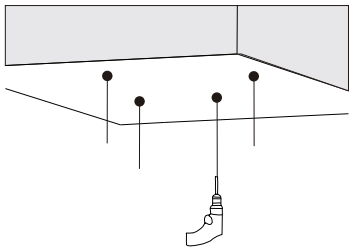


3. Drill on the marked areas

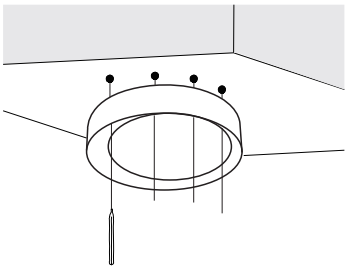


4. Apply plastic anchors & screws

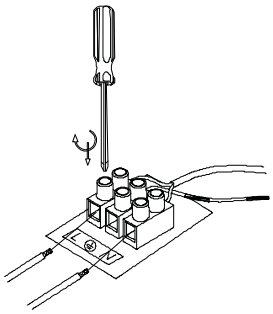


5. Connect the wires

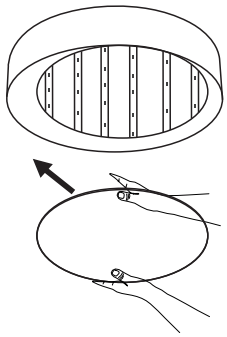


6. Put the product in place

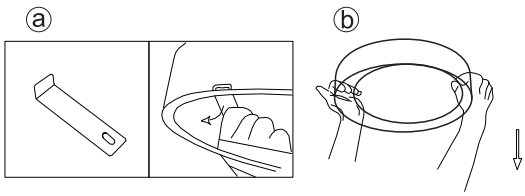

7. With the extra tool adjust the product

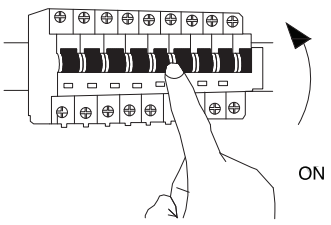

8. Turn on the general switch

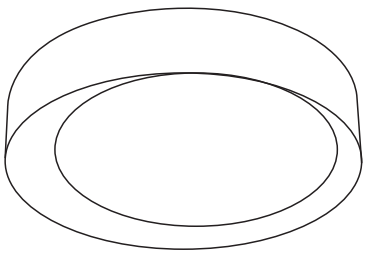

www.novaluce.com