
NOVA LUCE


9088135

1

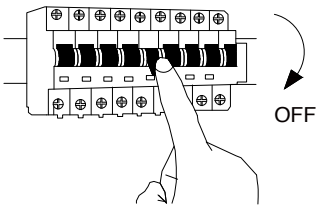


Turn off the general switch

2

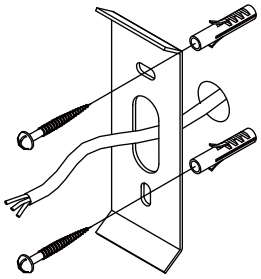


Drill holes & apply plastic anchors
With screws

3

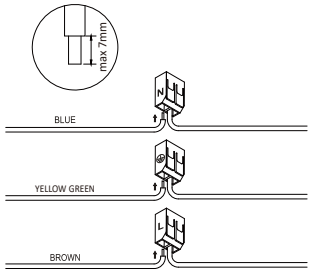


Connect the wires

4

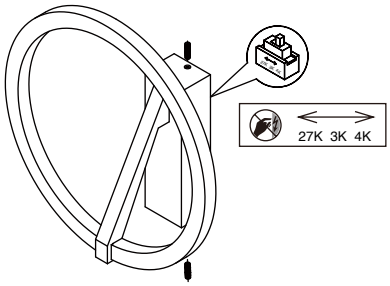


Apply the side screws
& control the CCT switch

5

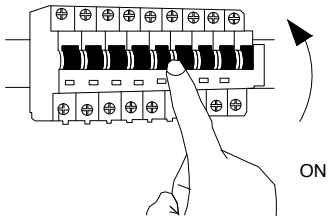

Turn on the general switch

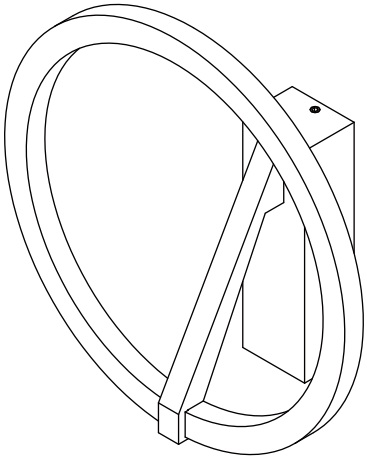

www.novaluce.com