
NOVA LUCE


9191542

1

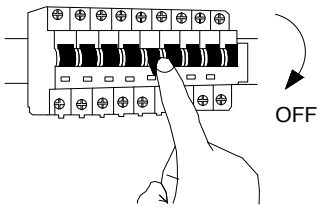


Turn off the general switch

2

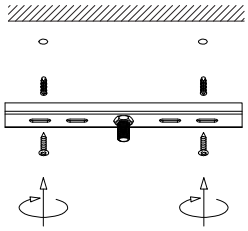


Drill holes & apply plastic anchors
With screws

3

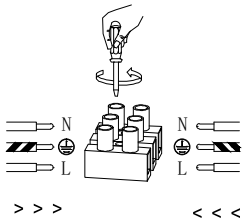


Connect the wires

4

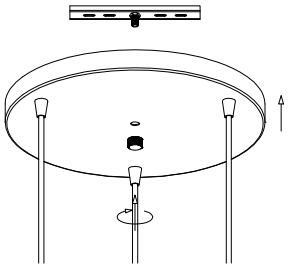


Rotate the cap and place the canopy
In place

5

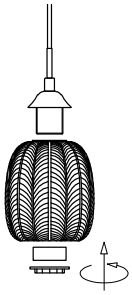


Apply the cap by rotating

6

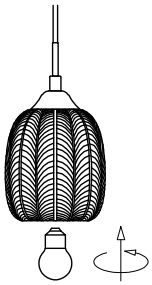


By rotating apply the bulb

7

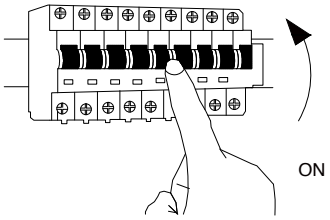

Turn on the general switch

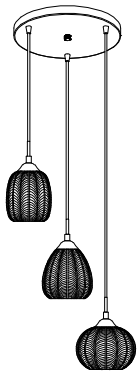

www.novaluce.com