
NOVA LUCE


9195061

1

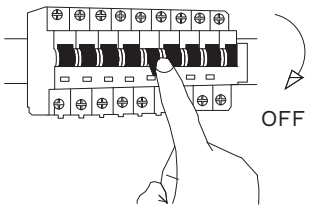



Turn off the general switch

2

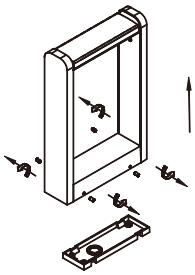


Untie the screws

3

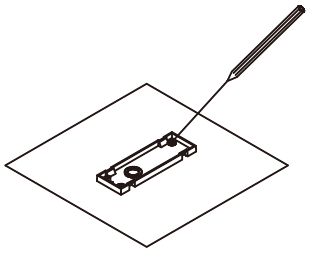


Mark the aereas

4

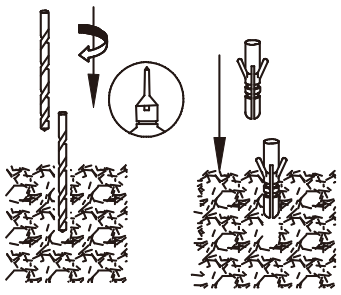


Drill holes & apply plastic anchors

5

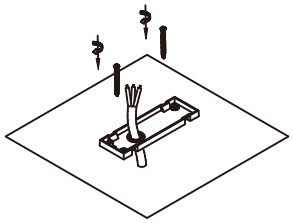


Tie up the screws to make it stable

6

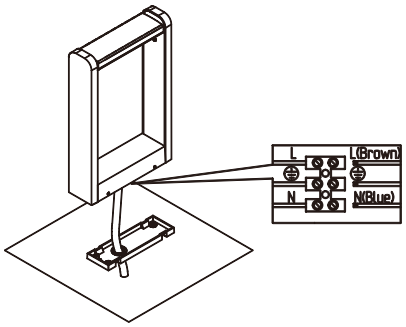



Connect the wires

7

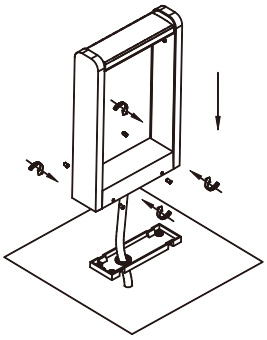

Tie up the side screws

8

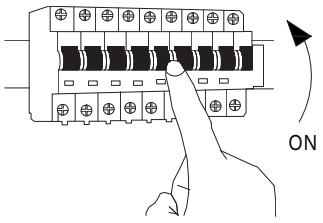


Turn on the general switch

